




SERIE 32

32026

Diagramma portate - Diagramme de charge - Leistungsdiagramme - Capacity chart - Diagrama de carga

32026 + J12L

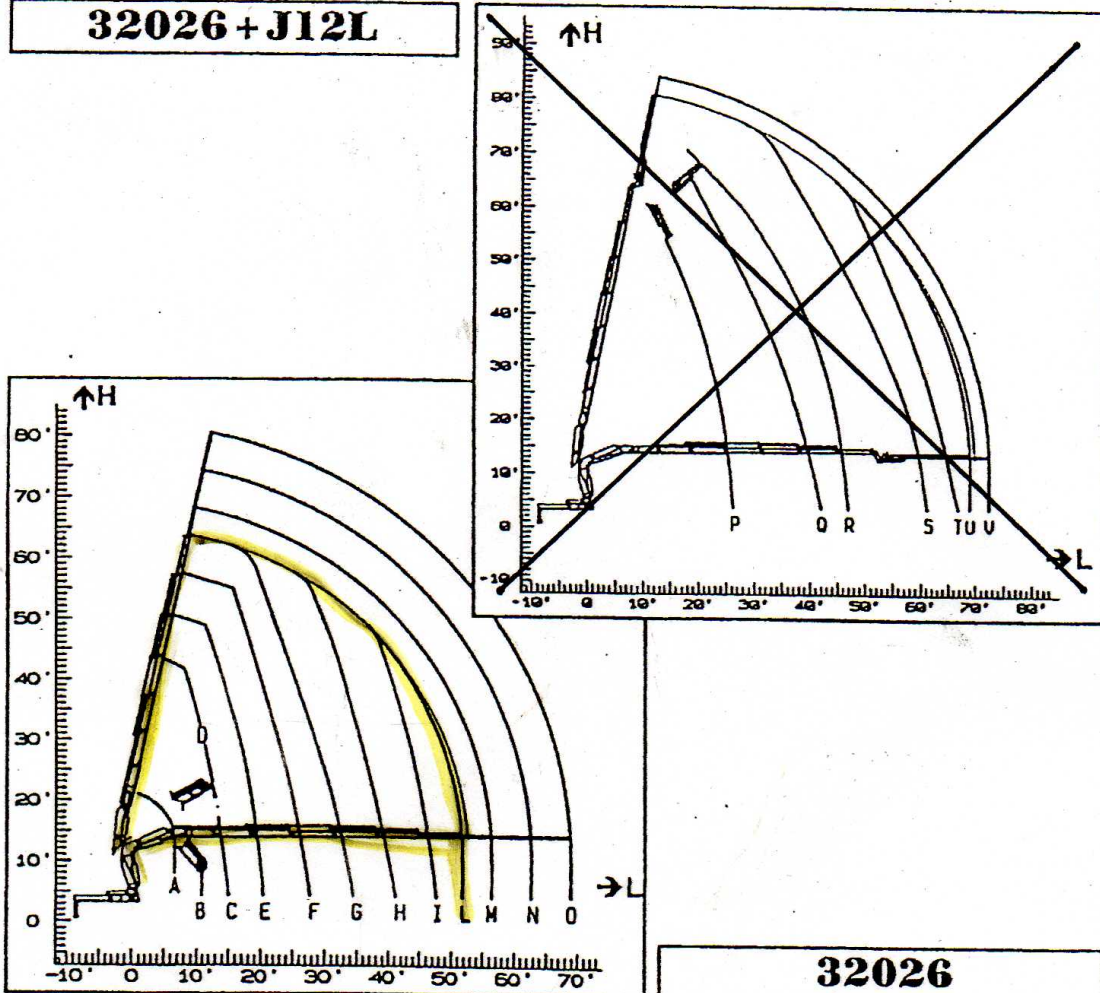

32026

		A	B	C	D	E	F	G	H	I	L	M	N	O	P	Q	R	S	T	U	V	Z	X	Y
lbs	↺	33520	18740	12790	13230	9040	5730	5220	4000	3310	2810	2400	1600	1200	3750	2650	2240	1140	770	550	300			
	↻					4190	4190	3090	3090	2870	2430	1650	1150	820										
ft	→L	5'7"	9'10"	14'9"	14'3"	20'4"	26'3"	32'6"	39'1"	45'7"	51'10"	57'9"	64"	70'3"	26'7"	38'0"	46'3"	60'0"	64'4"	68'11"	73'4"			
	↑H	21'	12'9"	17'1"	4'3"	4'9'10"	5'7'1"	6'4"	6'4"	6'4"	6'4"	7'0'2"	7'5'5"	8'2'8"	5'4"	6'5"	7'0'4"	7'8'5"	7'8'5"	7'8'5"	8'4'8"			

Per maggiori informazioni consultare il manuale di "Uso e Manutenzione" in dotazione alla macchina.
 Pour avoir plus d'informations, consultez le manuel d'Usage et Entretien joint à la machine.
 Für weitere Informationen lesen Sie bitte die der Maschine beiliegende Bedienungs- und Wartungsanleitung.
 For further information, consult the Operator's Manual supplied with the machine.
 Para mayores informaciones consultar el manual de Uso y Manutención suministrado con la maquina.

5.472.429

Vedi note pag. 7.17 - 7.18 - 7.19 - 7.20

See notes pages 7.17 - 7.18 - 7.19 - 7.20